


selva basic


SV SC8 BC, SV SC12 BC, SV SC8T BC

installation manual


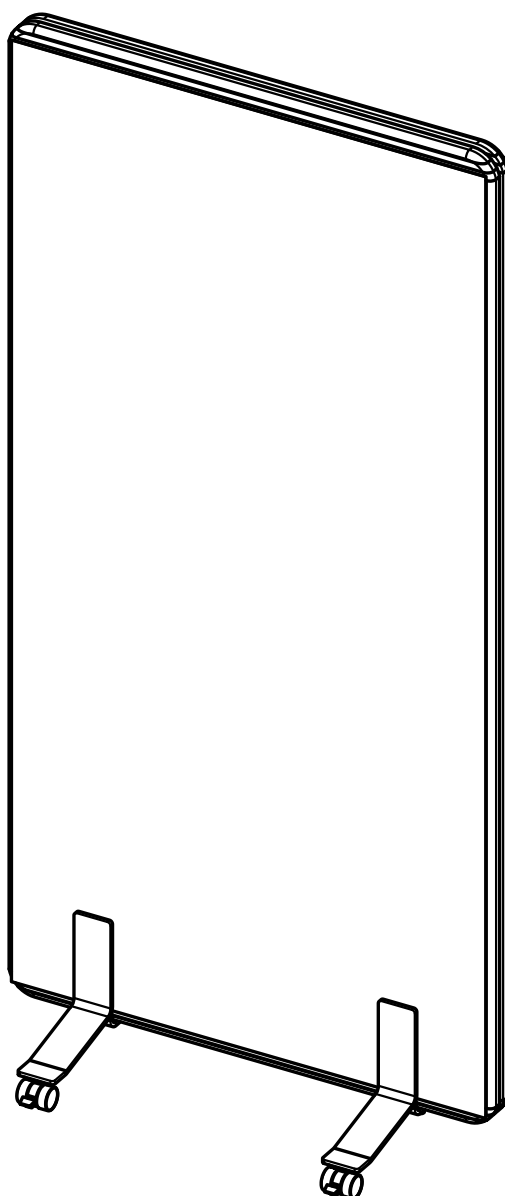


bejot:

people

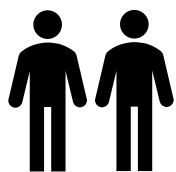


additional tools

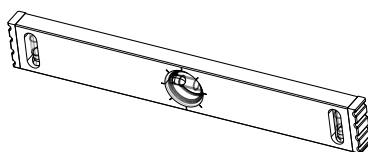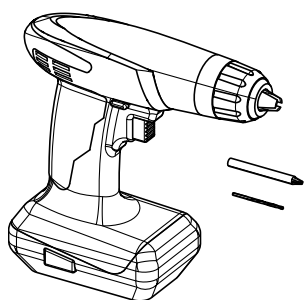


parts


1

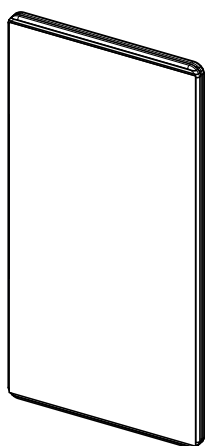


2

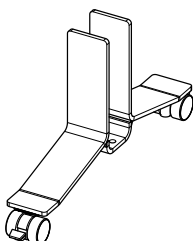

BCW

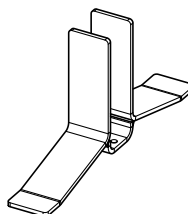


BC

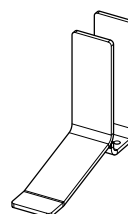

BC1

 
attached





M6x30

x4



1

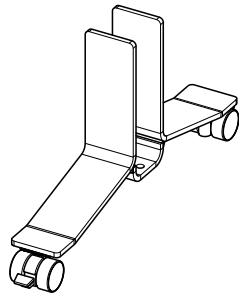


BCW

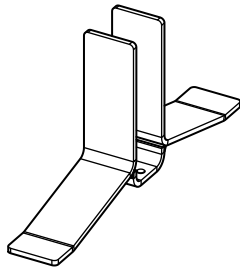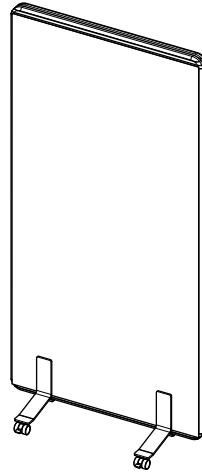

BC

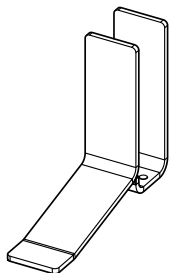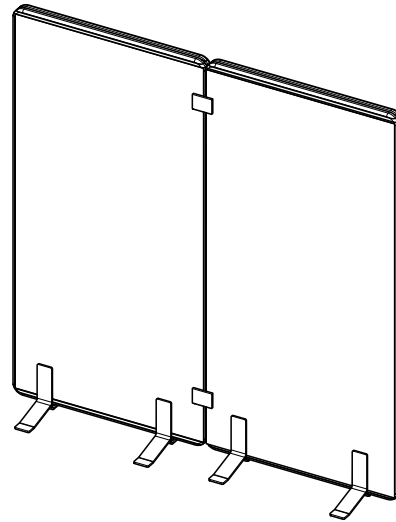


BC1

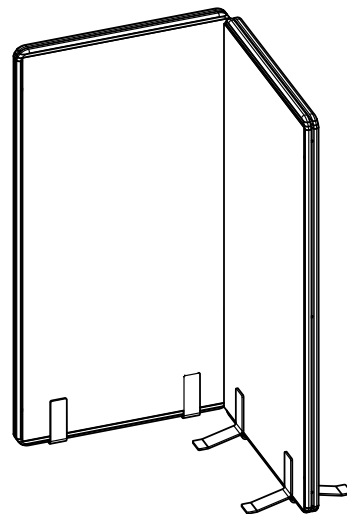


2 x BC1 + 2 x BC


2

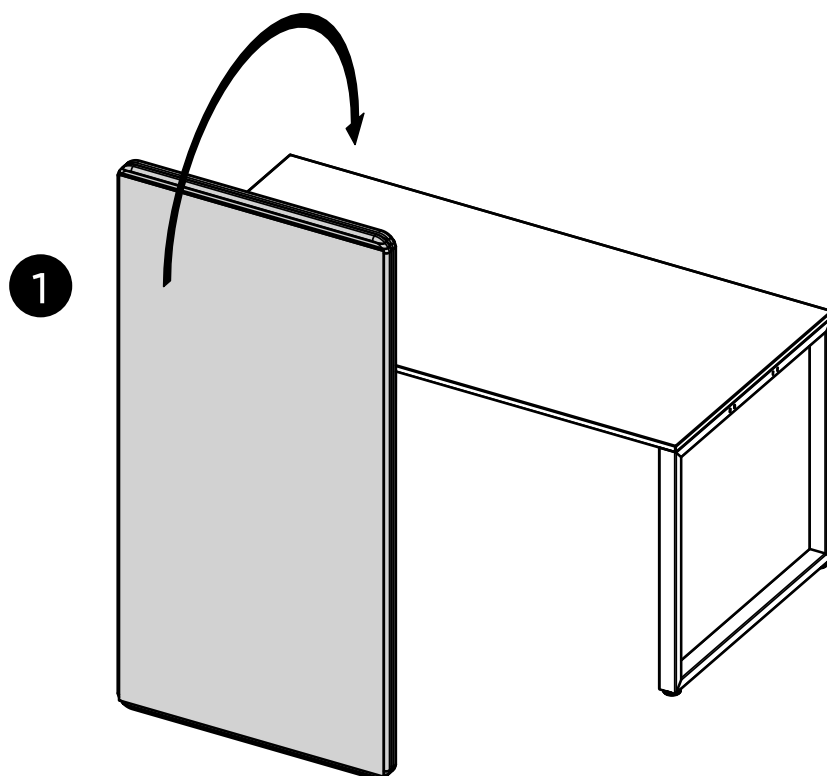




3

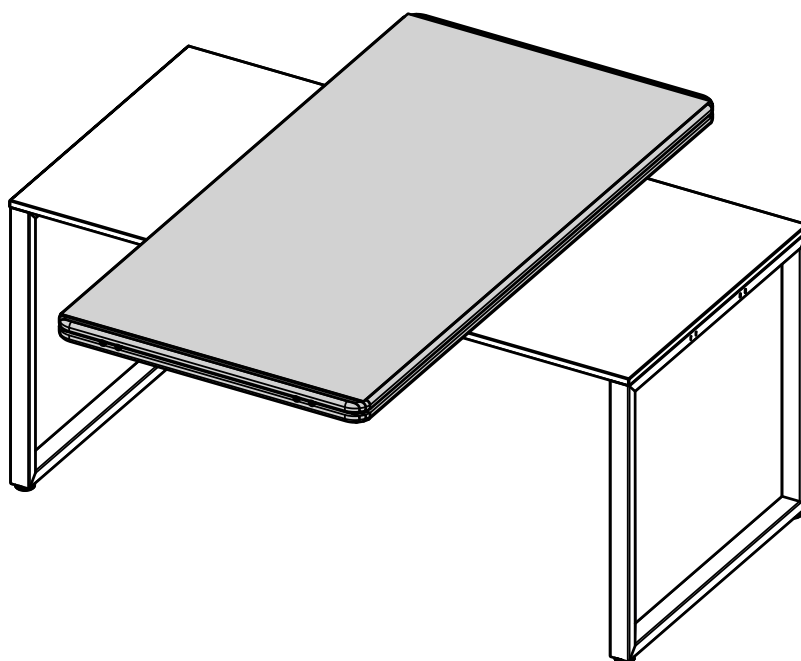



4

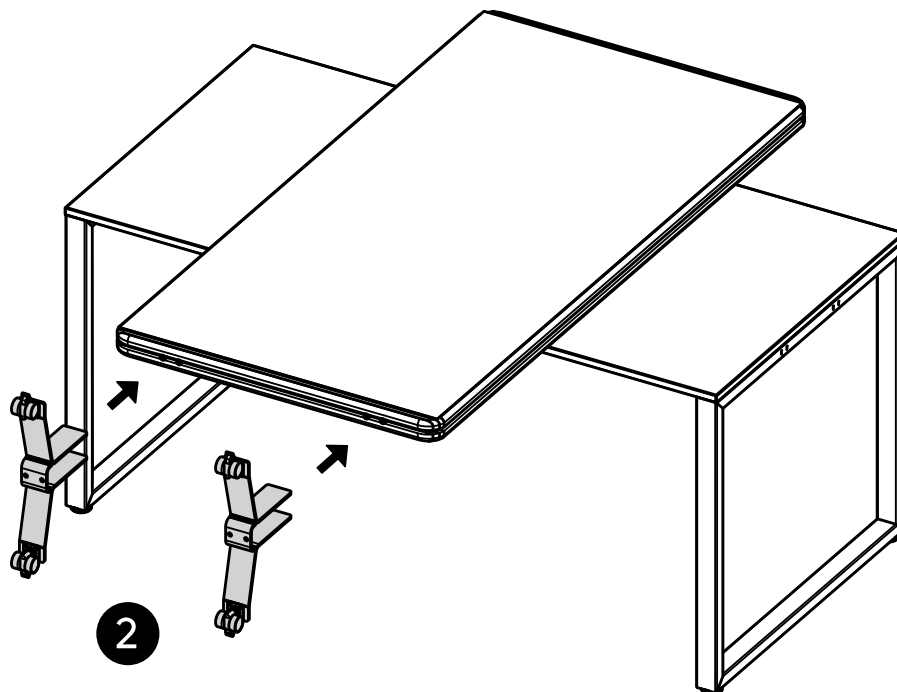

5

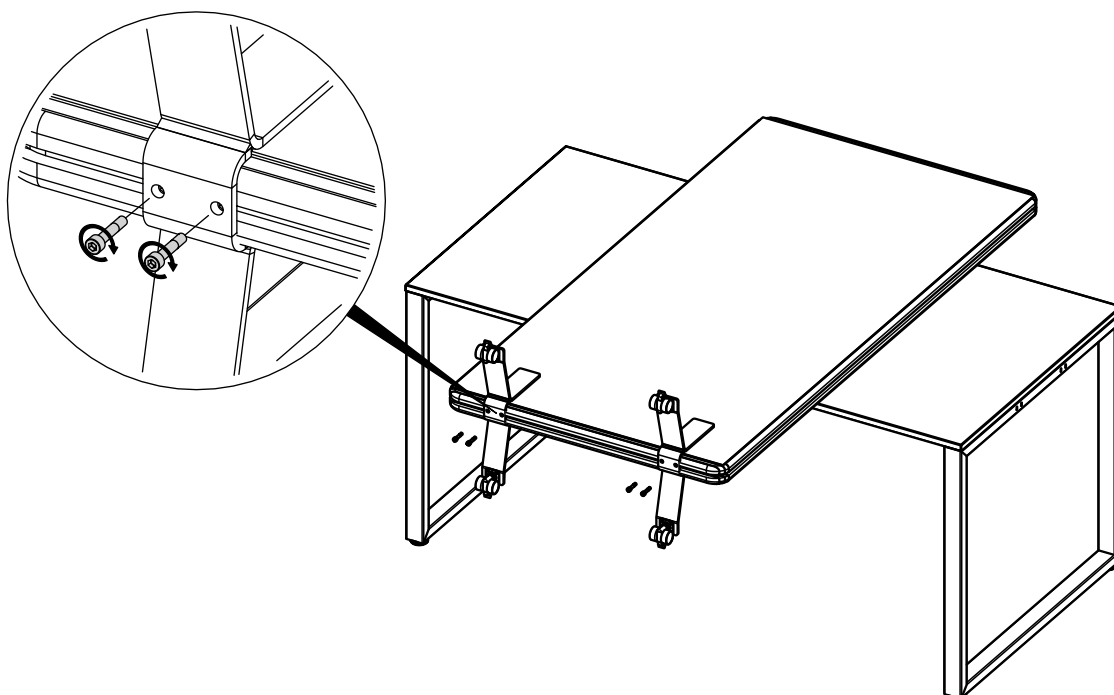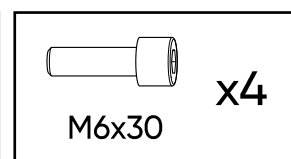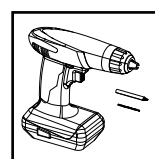


6

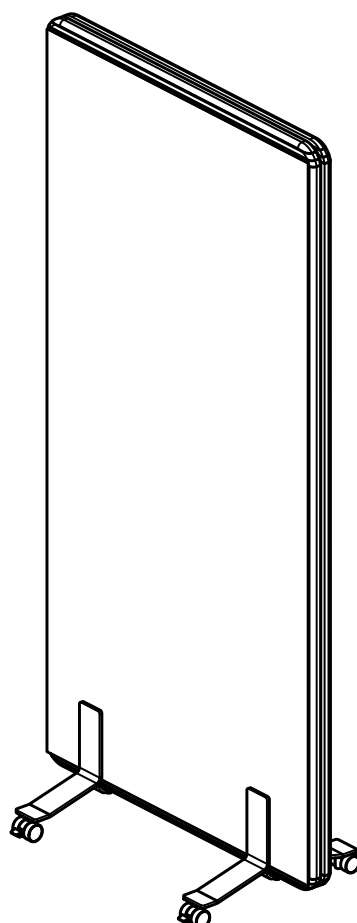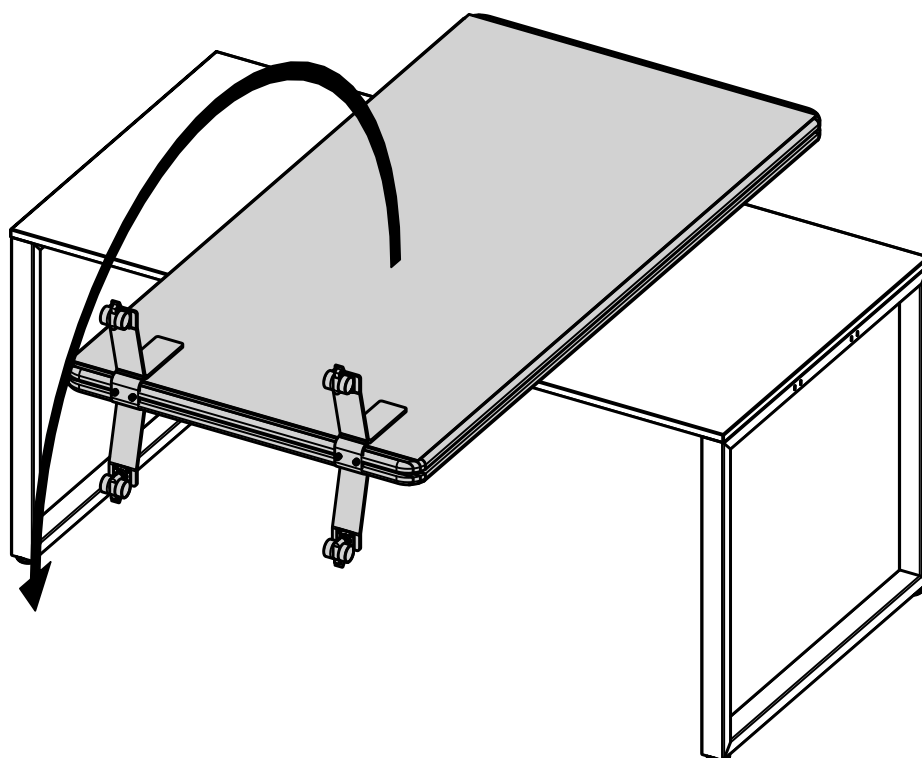

7

connecting walls

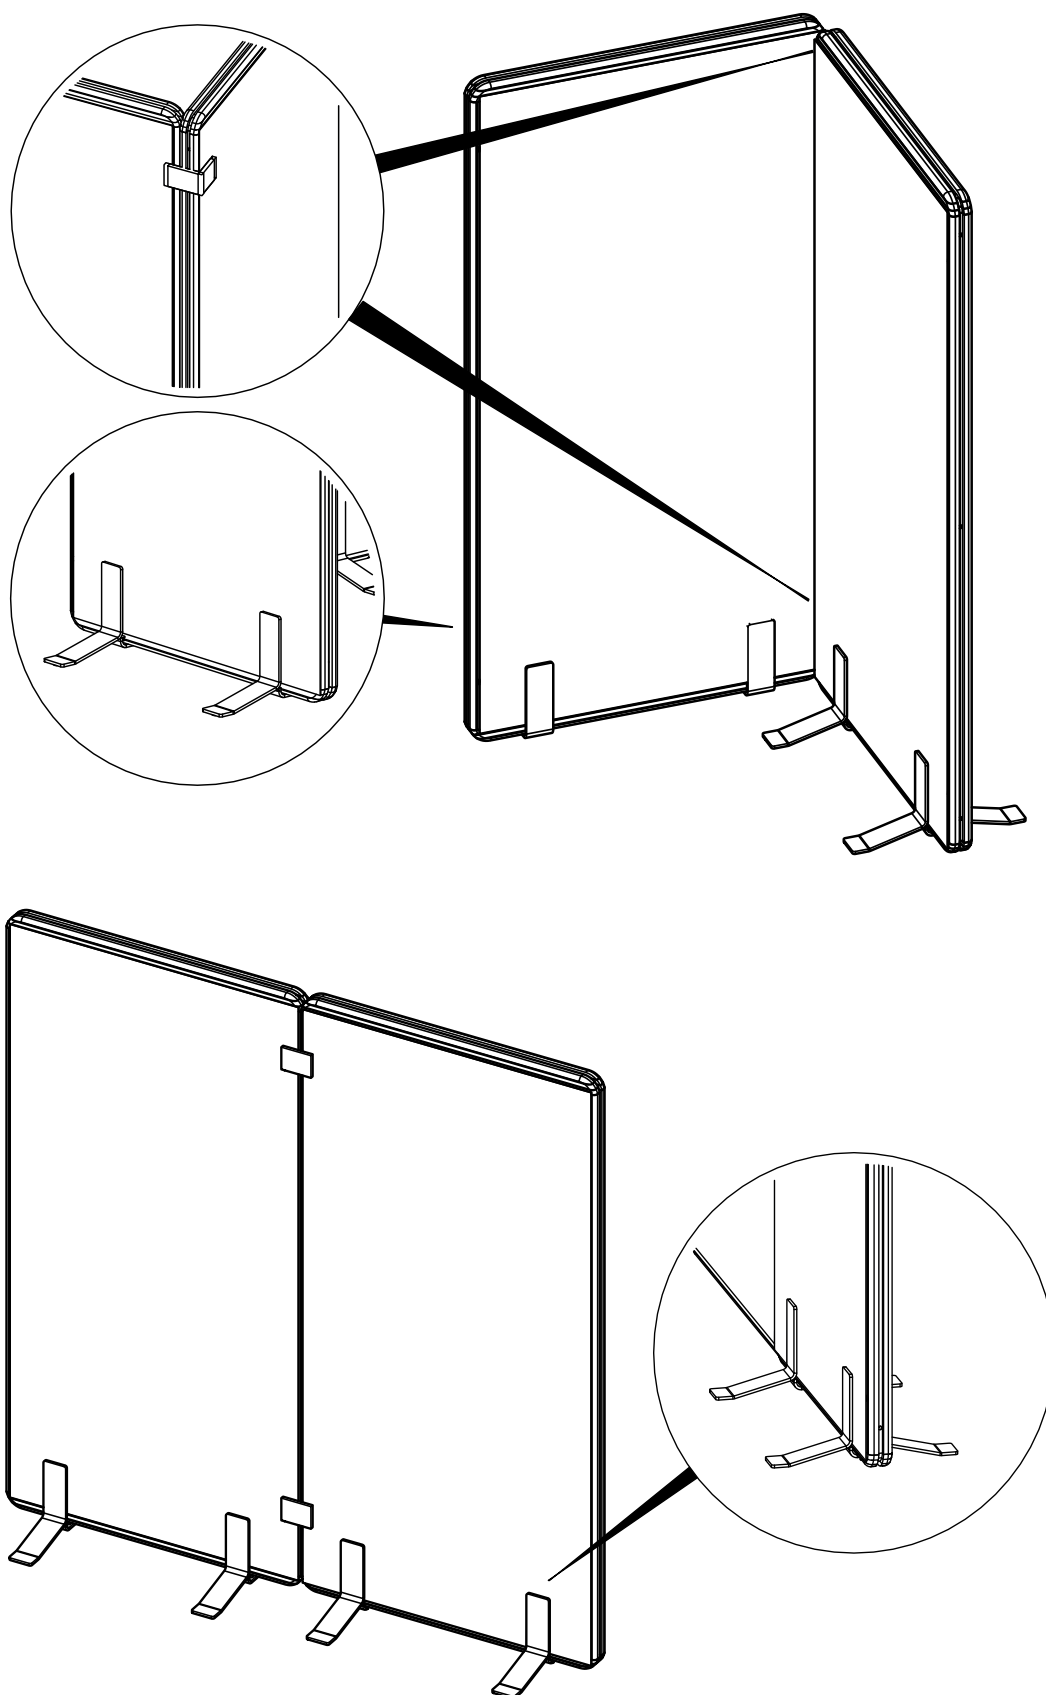

Bejot Sp. z o. o.

ul. Wybickiego 2A, Manieczki, 63-112 Brodnica n. Poznania, POLAND

tel.: +48 (61) 281 22 25, e-mail: biuro@bejot.eu

www.bejot.eu

edition 03/2022